

# kanmor® - User Brochure

Room Temperature Unit (RTU) 062e

D062e

04/07



The kanmor Room Temperature Unit (RTU) 062e consists of an air temperature sensor, a liquid crystal display (LCD) and four buttons. These buttons and the LCD are used to set and view the desired room temperature. The RTU's LCD displays the current room temperature, the outdoor air temperature and a number of other items.

The 062e can only be used with kanmor controls that are tN1 capable (tN1 or tN1 / tN2 terminals). The items that the 062e displays depends on the type of kanmor control that the RTU is connected to. To determine the exact items that are displayed by the RTU, refer to the Data Brochure for the control that the 062e is to be used with. In cases where a restricted temperature range is required, the RTU's range can be limited by changing the access level of the RTU.

## Definitions

The following defined terms and symbols are used throughout this manual to bring attention to the presence of hazards of various risk levels, or to important information concerning the life of the product.




Warning symbol: Indicates presence of hazards which can cause severe personal injury, death or substantial property damage if ignored.

## Installation

### STEP ONE — REMOVING THE FRONT COVER


Place a small screwdriver or similar object into the small slot located in the top of the RTU enclosure. Push the screwdriver down against the plastic tab and pull the top of the front cover so that it pivots around the bottom edge of the RTU. The back cover provides the base to which the front of the RTU mounts. Store the front of the RTU in a safe place until wiring must be completed.

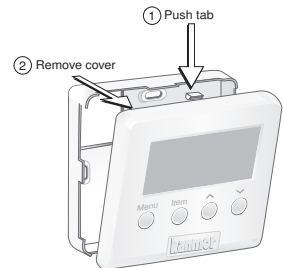

### STEP TWO — MOUNTING THE RTU

The RTU should be installed on an interior wall of the desired zone to be controlled. Do not mount the RTU in a location that may be affected by localized heat sources or cold drafts. It may be necessary to install a draft barrier behind the enclosure in order to prevent air from blowing through the wiring hole and affecting the RTU reading.



Mount the RTU directly to the wall using two #6-1" screws. The screws are inserted through the mounting holes and must be securely fastened to the wall. If possible, at least one of the screws should enter a wall stud or similar surface. If local code requires that the RTU be mounted to an electrical box, use the enclosed Wall Plate 008e. This plate will mount to the electrical box and the RTU will then mount to the plate. Ensure that the electrical box does not provide cold air to the RTU.

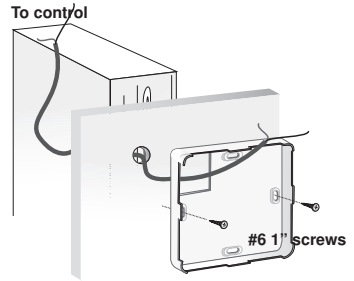

### ⚠ STEP THREE ————— WIRING THE RTU

Run 18 AWG twisted pair or similar wire between the RTU and the control. The wires are to be stripped to a length of 9 mm (3/8"). Insert the wires through the hole provided in the back of the RTU enclosure and connect them to the Com and the tN1 terminals. Do not run the wires parallel to telephone or power lines as this may interfere with the operation of the RTU. If the RTU wires are located in an area with strong sources of electromagnetic noise, shielded cable should be used or the wires can be run in a grounded metal conduit.

**Note:** Do not apply power to the RTU. The RTU is powered by the control. The connection between the control and the RTU is polarity sensitive. The Com terminal of the RTU must be connected to the Com terminal of the control and the tN1 terminal of the RTU must be connected to the appropriate tN1 terminal of the control. If the wires are reversed, the display on the RTU will remain blank and the control will display a short circuit error for the tN1 device.

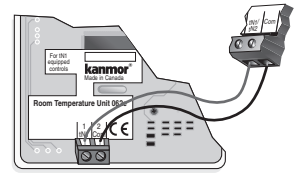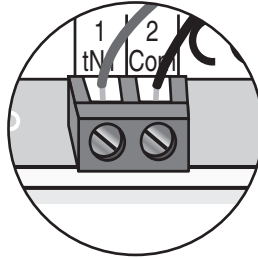

### STEP FOUR ————— INSTALLING THE FRONT COVER


Align the hinges on the bottom of the front cover with the bottom of the RTU mounting base. Pivot the front cover around the bottom hinges and push the top against the mounting base until it snaps firmly in place.

## Installation - Wall Plate 008e

The kanmor Wall Plate 008e allows for installation of a small enclosure Room Temperature Unit (RTU), thermostat, or Indoor Sensor on to an electrical box. The wall plate can be mounted vertical or horizontal and is designed to allow wiring to feed through in both positions. Included with the wall plate are screws for mounting to the electrical box.



### STEP ONE ————— MOUNTING THE PLATE

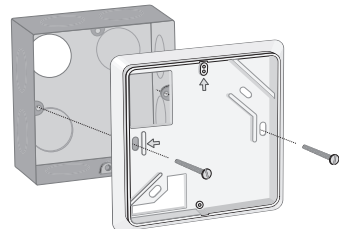The Wall Plate is mounted onto an electrical box using the supplied screws. Ensure that at least one of the arrows molded in the plastic points upwards. Also ensure that the electrical box is properly insulated and protected from cold drafts. All required wiring must be pulled through the existing top left hand hole of the wall plate.





## Settings



### VIEW MENU

When in the view menu, press either the  or  button to adjust the desired room temperature. The temperature being adjusted depends on whether the control is in the Occupied or UnOccupied mode. Refer to the control's Data Brochure for available items.

### ADJUST MENU

Use the **Menu** button to select the Adjust menu. In the Adjust menu, use the **Item** button to select the item to adjust, then use either the  or  buttons to adjust it. Refer to the control's Data Brochure for available items.

### TEMPERATURE UNITS

The RTU is capable of displaying the temperature in either °C or °F. In order to select the temperature units, press the **Menu** button until the Miscellaneous (Misc) menu is displayed. Then, while the UNITS item is displayed, use the  or  button to select the desired units of measure.

### ACCESS LEVELS

The RTU has four access levels that restrict the number of Menus, Items, and Adjustments that can be accessed by the user. The four access levels are Limited (LTD), User (USER), Installer (INST), and Advanced (ADV).

The access level of the RTU is found in the Miscellaneous (Misc) menu. The access level can only be viewed and / or adjusted when the Lock / Unlock DIP switch of the control that the RTU is connected to is set to the Unlock position. To determine if the RTU's access level is currently locked or unlocked, a small segment representing a padlock is viewed in the bottom right hand corner of the display.

### LIMITING THE TEMPERATURE RANGE

The adjustment range of the desired room temperature can be limited in order to avoid extreme temperature settings. Set the desired room temperature in the Adjust menu. Then go to the Miscellaneous (Misc) menu and select the LTD access level. If desired, set the Lock / Unlock DIP switch on the control to the Lock position so that the access level can no longer be adjusted.

As long as the RTU remains in the LTD access level the room temperature setting(s) can only be adjusted  $\pm 3^{\circ}\text{F}$  ( $\pm 1^{\circ}\text{C}$ ) from the setting that was selected when the RTU was placed into the LTD access level.

## Technical Data

### ROOM TEMPERATURE UNIT (RTU) 062e

Literature	D 062e
Packaged weight	225 g (00.5 lb.), Enclosure J, white PVC plastic.
Dimensions	73 x 73 x 21 mm (2-7/8" H x 2-7/8" W x 13/16" D).
Approvals	CE approved, meets DOC & FCC regulations for EMI/RFI.
Ambient conditions	Indoor use only, 0 to 50 °C (32 to 122 °F), < 90% RH non-condensing, Altitude <2000 m, Installation category II, Pollution category II.
Power Supply	kanmor control; tN1.
Internal Sensor Included	NTC thermistor, 10 kΩ @ 77 °F (25 °C ±0.2 °C), β=3892. 008e

## Limited Warranty and Product Return Procedure

**Limited Warranty** *The liability of kanmor Control Systems Ltd. ("kanmor") under this warranty is limited. The Purchaser, by taking receipt of any kanmor product ("Product"), acknowledges the terms of the Limited Warranty in effect at the time of such Product sale and acknowledges that it has read and understands same.*

The kanmor Limited Warranty to the Purchaser on the Products sold hereunder is a manufacturer's pass-through warranty which the Purchaser is authorized to pass through to its customers. Under the Limited Warranty, each kanmor Product is warranted against defects in workmanship and materials if the Product is installed and used in compliance with kanmor's instructions, ordinary wear and tear excepted. The pass-through warranty period is for a period of twenty-four (24) months from the production date if the Product is not installed during that period, or twelve (12) months from the documented date of installation if installed within twenty-four (24) months from the production date.

The liability of kanmor under the Limited Warranty shall be limited to, at kanmor's sole discretion: the cost of parts and labor provided by kanmor to repair defects in materials and/or workmanship of the defective product; or to the exchange of the defective product for a warranty replacement product; or to the granting of credit limited to the original cost of the defective product, and such repair, exchange or credit shall be the sole remedy available from kanmor, and, without limiting the foregoing in any way, kanmor is not responsible, in contract, tort or strict product liability, for any other losses, costs, expenses, inconveniences, or damages, whether direct, indirect, special, secondary, incidental or consequential, arising from ownership or use of the product, or from defects in workmanship or materials, including any liability for fundamental breach of contract.

The pass-through Limited Warranty applies only to those defective Products returned to kanmor during the warranty period. This Limited Warranty does not cover the cost of the parts or labor to remove or transport the defective Product, or to reinstall the repaired or replacement Product, all such costs and expenses being subject to Purchaser's agreement and warranty with its customers.

Any representations or warranties about the Products made by Purchaser to its customers which are different from or in excess of the kanmor Limited Warranty are the Purchaser's sole responsibility and obligation. Purchaser shall indemnify and hold kanmor harmless from and against any and all claims, liabilities and damages of any kind or nature which arise out of or are related to any such representations or warranties by Purchaser to its customers.

The pass-through Limited Warranty does not apply if the returned Product has been damaged by negligence by persons other than kanmor, accident, fire, Act of God, abuse or misuse; or has been damaged by modifications, alterations or attachments made subsequent to purchase which have not been authorized by kanmor; or if the Product was not installed in compliance with kanmor's instructions and/or the local codes and ordinances; or if due to defective installation of the Product; or if the Product was not used in compliance with kanmor's instructions.

THIS WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, WHICH THE GOVERNING LAW ALLOWS PARTIES TO CONTRACTUALLY EXCLUDE, INCLUDING, WITHOUT LIMITATION, IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, DURABILITY OR DESCRIPTION OF THE PRODUCT, ITS NON-INFRINGEMENT OF ANY RELEVANT PATENTS OR TRADEMARKS, AND ITS COMPLIANCE WITH OR NON-VIOLATION OF ANY APPLICABLE ENVIRONMENTAL, HEALTH OR SAFETY LEGISLATION; THE TERM OF ANY OTHER WARRANTY NOT HEREBY CONTRACTUALLY EXCLUDED IS LIMITED SUCH THAT IT SHALL NOT EXTEND BEYOND TWENTY-FOUR (24) MONTHS FROM THE PRODUCTION DATE, TO THE EXTENT THAT SUCH LIMITATION IS ALLOWED BY THE GOVERNING LAW.

**Product Warranty Return Procedure** All Products that are believed to have defects in workmanship or materials must be returned, together with a written description of the defect, to kanmor through its Representative. If kanmor receives an inquiry from someone other than a kanmor Representative, including an inquiry from Purchaser (if not a kanmor Representative) or Purchaser's customers, regarding a potential warranty claim, kanmor's sole obligation shall be to provide the address and other contact information regarding the appropriate Representative.

**kanmor**<sup>®</sup>  
Control Systems

kanmor Control Systems Ltd.  
5100 Silver Star Road  
Vernon, B.C. V1B 3K4, CANADA  
(250) 545-2693 Fax. 250 549-4349  
Web Site: [www.kanmor.com](http://www.kanmor.com)

