 


Features:


- Large Multilingual Display
- Remote Air Sensing
- Manual Override
- Floor Heating
- Night Setback
- Backlight

 Table of Contents

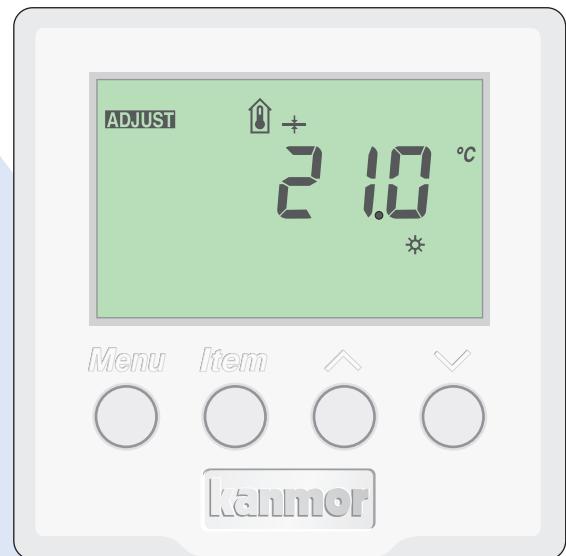





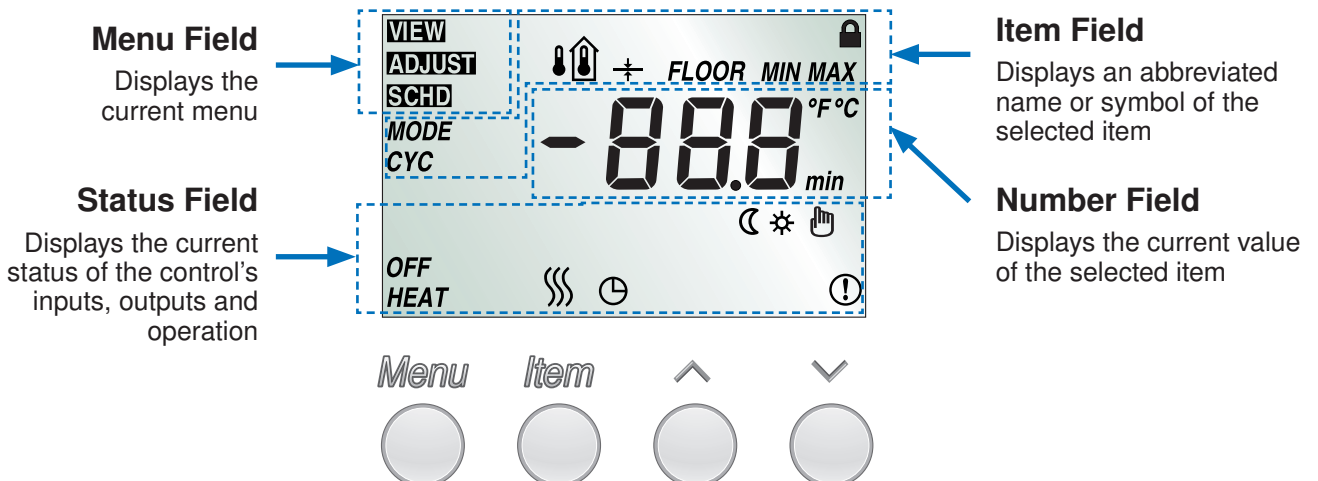





Display	1
Symbol Description.....	2
User Interface	2
View the Temperatures.....	2
Adjust the Temperature Settings	3
Night Setback Operation	4
Select a Manual Override	4
Error Messages	4
Cleaning the Thermostat	4
Warranty	4



Display



Symbol Description

HEAT 	HEAT Thermostat is in the heating mode of operation.	OFF 	OFF Thermostat is in the off mode of operation.
	MANUAL OVERRIDE Shown when an override is manually selected.		INSTALLER / USER A padlock is shown while in the user access level.
	OUTDOOR TEMPERATURE Shown together with the measured outdoor temperature.		WARNING Shown when an error message is present.
	INDOOR TARGET Shown together with the desired indoor air temperature.		INDOOR TEMPERATURE Shown together with the measured indoor air temperature.
	WAKE Shown while operating at the wake temperature.		SLEEP Shown while operating at the sleep temperature.
	HEAT CONTACT Shows when the heat contact is closed.		EXTERNAL NIGHT SETBACK Shown when external night setback signal is present.





User Interface

The thermostat has 3 menus:

View - view the measured temperatures

Adjust - adjust the operating temperatures

 
Schedule - select a manual override

- Press the Menu  button to change the menu.
- Press the Item  button to advance to the next item within a menu.
- Press the up  or down  button to change the setting.

View the Temperatures

View the Indoor Temperature


If an indoor sensor is active:

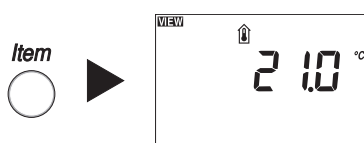

- To change the Indoor Target: Press the up  or down  button.

View the **FLOOR** Temperature

 
If a floor sensor is installed:

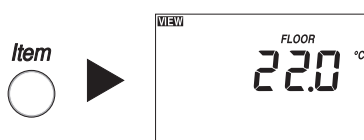

- To change the FLOOR MIN when there is no Indoor temperature: Press the up  or down  button.

View the Outdoor Temperature

 If an outdoor sensor is installed:

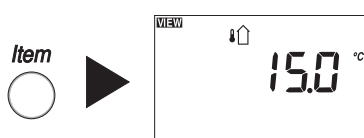

Adjust the Temperature Settings

Step 1 Enter the Adjust Menu



- Press the menu button to enter the Adjust menu.
- Adjust menu allows changes to the temperatures.

Adjust the *MODE* of Operation

 




OFF or HEAT

- Press the up  or down  button to select between 'OFF' or 'HEAT'.

Step 2 Adjust the Indoor Target \pm Temperature

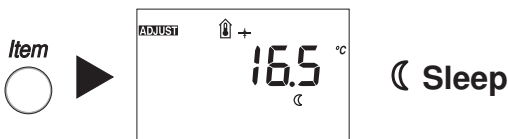If an indoor sensor is active:





- Press the up  or down  button to permanently adjust the Indoor Target temperature.
- Wake is the normal operating temperature.
- Sleep is the operating temperature while a night setback signal or manual override is present.

 
Step 3 Adjust the *FLOOR MIN* Temperature



If a floor sensor is active:



- Press the up  or down  button to permanently adjust the Floor Minimum temperature.
- Wake is the normal operating temperature.
- Sleep is the operating temperature while a night setback signal or manual override is present.

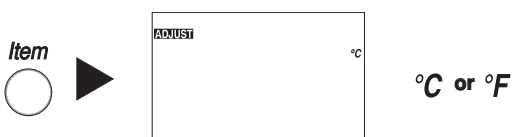Step 4 Adjust the Temperature Units °C / °F

 


- Select either °C or °F.
- Press the up  or down  button to change.

Night Setback Timer ⌚ Operation


When an external control with a timer is installed, the thermostat night setback can be activated. When the timer signal is received, a time clock symbol appears. The thermostat now operates at the sleep temperature.

Select a Manual Override 🖱️

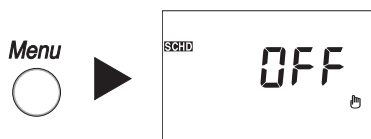

- When the manual override is set to 'On', the thermostat operates at the sleep temperature.
- Press the up ⬆️ or down ⬇️ button to set to 'On'.
- The override remains until it is manually changed to 'OFF'.

 Error Messages ⚠️

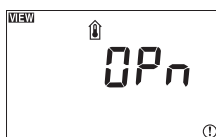

When the thermostat encounters a sensor problem, a Warning Symbol together with a description appears on the display. To correct the error, please refer to the Data Brochure or contact a qualified installer.

Cleaning the Thermostat

The thermostat's exterior can be cleaned using a damp cloth. Moisten the cloth with water and wring out prior to wiping the thermostat. Do not use solvents or cleaning solutions.

Limited Warranty and Product Return Procedure

Limited Warranty *The liability of kanmor Control Systems Ltd. ("kanmor") under this warranty is limited. The Purchaser, by taking receipt of any kanmor product ("Product"), acknowledges the terms of the Limited Warranty in effect at the time of such Product sale and acknowledges that it has read and understands same.*

The kanmor Limited Warranty to the Purchaser on the Products sold hereunder is a manufacturer's pass-through warranty which the Purchaser is authorized to pass through to its customers. Under the Limited Warranty, each kanmor Product is warranted against defects in workmanship and materials if the Product is installed and used in compliance with kanmor's instructions, ordinary wear and tear excepted. The pass-through warranty period is for a period of twenty-four (24) months from the production date if the Product is not installed during that period, or twelve (12) months from the documented date of installation if installed within twenty-four (24) months from the production date.

The liability of kanmor under the Limited Warranty shall be limited to, at kanmor's sole discretion: the cost of parts and labor provided by kanmor to repair defects in materials and/or workmanship of the defective product; or to the exchange of the defective product for a warranty replacement product; or to the granting of credit limited to the original cost of the defective product, and such repair, exchange or credit shall be the sole remedy available from kanmor, and, without limiting the foregoing in any way, kanmor is not responsible, in contract, tort or strict product liability, for any other losses, costs, expenses, inconveniences, or damages, whether direct, indirect, special, secondary, incidental or consequential, arising from ownership or use of the product, or from defects in workmanship or materials, including any liability for fundamental breach of contract.

The pass-through Limited Warranty applies only to those defective Products returned to kanmor during the warranty period. This Limited Warranty does not cover the cost of the parts or labor to remove or transport the defective Product, or to reinstall the repaired or replacement Product, all such costs and expenses being subject to Purchaser's agreement and warranty with its customers.

Any representations or warranties about the Products made by Purchaser to its customers which are different from or in excess of the kanmor Limited Warranty are the Purchaser's sole responsibility and obligation. Purchaser shall indemnify and hold kanmor harmless from and against any and all claims, liabilities and damages of any kind or nature which arise out of or are related to any such representations or warranties by Purchaser to its customers.

The pass-through Limited Warranty does not apply if the returned Product has been damaged by negligence by persons other than kanmor, accident, fire, Act of God, abuse or misuse; or has been damaged by modifications, alterations or attachments made subsequent to purchase which have not been authorized by kanmor; or if the Product was not installed in compliance with kanmor's instructions and/or the local codes and ordinances; or if due to defective installation of the Product; or if the Product was not used in compliance with kanmor's instructions.

THIS WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, WHICH THE GOVERNING LAW ALLOWS PARTIES TO CONTRACTUALLY EXCLUDE, INCLUDING, WITHOUT LIMITATION, IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, DURABILITY OR DESCRIPTION OF THE PRODUCT, ITS NON-INFRINGEMENT OF ANY RELEVANT PATENTS OR TRADEMARKS, AND ITS COMPLIANCE WITH OR NON-VIOLATION OF ANY APPLICABLE ENVIRONMENTAL, HEALTH OR SAFETY LEGISLATION; THE TERM OF ANY OTHER WARRANTY NOT HEREBY CONTRACTUALLY EXCLUDED IS LIMITED SUCH THAT IT SHALL NOT EXTEND BEYOND TWENTY-FOUR (24) MONTHS FROM THE PRODUCTION DATE, TO THE EXTENT THAT SUCH LIMITATION IS ALLOWED BY THE GOVERNING LAW.

Product Warranty Return Procedure All Products that are believed to have defects in workmanship or materials must be returned, together with a written description of the defect, to kanmor through its Representative. If kanmor receives an inquiry from someone other than a kanmor Representative, including an inquiry from Purchaser (if not a kanmor Representative) or Purchaser's customers, regarding a potential warranty claim, kanmor's sole obligation shall be to provide the address and other contact information regarding the appropriate Representative.

kanmor[®]
Control Systems

kanmor Control Systems Ltd.
5100 Silver Star Road
Vernon, B.C. CANADA V1B 3K4
250-545-2693 Fax. 250-549-4349
Web Site: www.kanmor.com

