

# kanmor® - Data Brochure

Slab Sensor 079e

D079e

12/08

The kanmor Slab Sensor 079e has a stainless steel sleeve which is designed for use in concrete, thin-set or grout. The 079e is supplied with 3 m of two conductor zipcord.

## Definitions

The following defined terms and symbols are used throughout this manual to bring attention to the presence of hazards of various risk levels, or to important information concerning the life of the product.



Warning symbol: Indicates presence of hazards which can cause severe personal injury, death or substantial property damage if ignored.


## Installation - Indoor Sensor 079e

### STEP ONE ——— INSTALLING THE INDOOR SENSOR ———

#### *New Installations*


#### Thin-Set or Thin-Pour Applications

If the floor covering is to be installed over either a thin-set or thin-pour material of sufficient depth, the 079e slab sensor can be placed directly into either the thin-set material or the thin-pour material and covered over. Ensure that the sensor is located in such a position that the attached wire is able to reach to a suitable junction location. Splices within the thin-set or thin-pour should be avoided to ensure trouble free operation. The sensor should be located mid way between the heating elements to ensure a proper temperature reading.

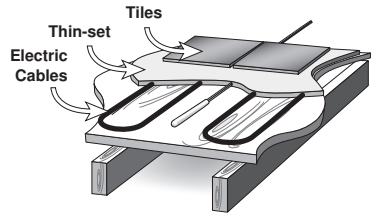


#### Thin Floor Coverings (less than 10 mm)

If a thin floor covering is to be installed directly to the subfloor, a groove 4 mm (1/8") wide by 2 mm (1/16") deep can be cut into the surface of the subfloor to accommodate the wire for the sensor. Ensure that the sensor is located in such a position that the attached wire is able to reach to a suitable junction location. Splices under the floor covering should be avoided to ensure trouble free operation. A groove 5 mm wide by 5 mm deep by 45 mm long should be cut to accommodate the sensor. The sensor should be located mid way between the heating elements to ensure a proper temperature reading.

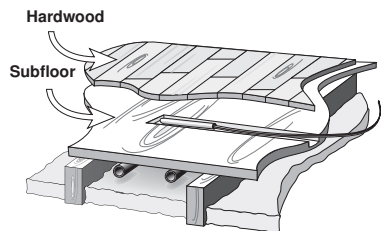

## Thick Floor Coverings (greater than 10 mm)


If a thick floor covering is to be installed directly to the subfloor, a groove 4 mm wide by 2 mm deep can be cut into the back of the flooring material to accommodate the wire for the sensor. Ensure that the sensor is located in such a position that the attached wire is able to reach to a suitable junction location. Splices under the floor covering should be avoided to ensure trouble free operation. A groove 5 mm wide by 5 mm deep by 45 mm long should be cut to accommodate the sensor. The sensor should be located mid way between the heating elements to ensure a proper temperature reading.

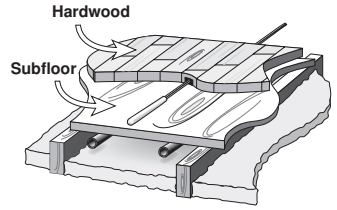

**Note:** If it is not practical to cut a groove in the surface covering, follow the installation method used for thin floor coverings.

## Thick Pour Applications


If the floor covering is to be installed over a thick pour material of sufficient depth it is recommended that the sensors be installed in a plastic or metal conduit embedded in the slab. The conduit should be run back to a suitable junction location. If there is a sensor failure, this allows the sensor to be removed and replaced. The sensor should be placed approximately 25 mm below the slab surface and located mid way between the heating elements to ensure a proper temperature reading.

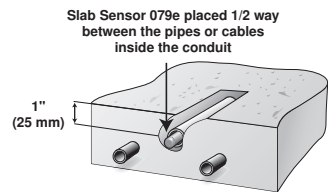

## Retro-fit Installations


### Tile Floor Coverings

If a Slab Sensor 079e is to be installed into an existing tile floor with sufficiently large grout lines, the sensor and wire can be installed in one of the grout lines between the tiles. Select a low traffic area of the floor that is mid way between the heating elements for the sensor location. Ensure that the sensor is located in such a position that the attached wire is able to reach to a suitable junction location. Splices within the grout should be avoided to ensure trouble free operation. Remove the appropriate grout line and place the sensor and wire in the floor. Re-grout the area.

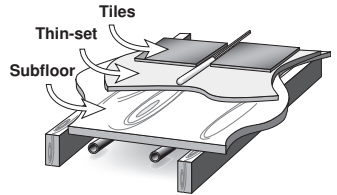

### Installing the Sensor to the Bottom of a Subfloor

If the sensor is to be installed to the bottom of a subfloor, cut a piece of 25 mm thick rigid insulation into a 150 mm by 150 mm square. A groove 5 mm wide by 5 mm deep by 45 mm long should be cut into the insulation to accommodate the sensor. Place the sensor in the groove and sandwich the sensor between the insulation and the subfloor. Use a suitable fastening method to affix the insulation to the subfloor.

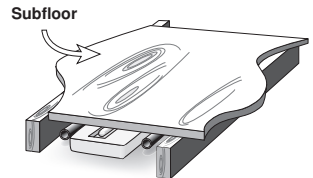

## STEP THREE — WIRING AND TESTING THE SENSOR

**Caution:** Do not run sensor wires parallel to telephone or power cables. If the sensor wires are located in an area with strong sources of electromagnetic interference, shielded cable or twisted pair should be used or the wires can be run in a grounded metal conduit.

The Slab Sensor 079e is supplied with 3 m of cable. If a longer length is required, .5 mm<sup>2</sup> or larger wire can be spliced onto the two wires from the sensor. Ensure all wires are stripped to a length of 10 mm. The splices should be properly soldered and protected in an accessible junction box. Follow the sensor testing instructions given in this brochure and then connect the wires to the control.

### Sensor Testing Instructions

A good quality test meter capable of measuring up to 5,000 k $\Omega$  (1 k $\Omega$  = 1000 $\Omega$ ) is required to measure the sensor resistance. In addition to this, the actual temperature must be measured with either a good quality digital thermometer, or if a thermometer is not available, a second sensor can be placed alongside the one to be tested and the readings compared.

First measure the temperature using the thermometer and then measure the resistance of the sensor at the control. The wires from the sensor must not be connected to the control while the test is performed. Using the chart below, estimate the temperature measured by the sensor. The sensor and thermometer readings should be close. If the test meter reads a very high resistance, there may be a broken wire, a poor wiring connection or a defective sensor. If the resistance is very low, the wiring may be shorted, there may be moisture in the sensor or the sensor may be defective. To test for a defective sensor, measure the resistance directly at the sensor location.

Do not apply voltage to a sensor at any time as damage to the sensor may result.

| Temperature |     | Resistance |  | Temperature |    | Resistance |  | Temperature |     | Resistance |  |
|-------------|-----|------------|--|-------------|----|------------|--|-------------|-----|------------|--|
| °F          | °C  | $\Omega$   |  | °F          | °C | $\Omega$   |  | °F          | °C  | $\Omega$   |  |
| -50         | -46 | 490,813    |  | 20          | -7 | 46,218     |  | 90          | 32  | 7,334      |  |
| -45         | -43 | 405,710    |  | 25          | -4 | 39,913     |  | 95          | 35  | 6,532      |  |
| -40         | -40 | 336,606    |  | 30          | -1 | 34,558     |  | 100         | 38  | 5,828      |  |
| -35         | -37 | 280,279    |  | 35          | 2  | 29,996     |  | 105         | 41  | 5,210      |  |
| -30         | -34 | 234,196    |  | 40          | 4  | 26,099     |  | 110         | 43  | 4,665      |  |
| -25         | -32 | 196,358    |  | 45          | 7  | 22,763     |  | 115         | 46  | 4,184      |  |
| -20         | -29 | 165,180    |  | 50          | 10 | 19,900     |  | 120         | 49  | 3,760      |  |
| -15         | -26 | 139,402    |  | 55          | 13 | 17,436     |  | 125         | 52  | 3,383      |  |
| -10         | -23 | 118,018    |  | 60          | 16 | 15,311     |  | 130         | 54  | 3,050      |  |
| -5          | -21 | 100,221    |  | 65          | 18 | 13,474     |  | 135         | 57  | 2,754      |  |
| 0           | -18 | 85,362     |  | 70          | 21 | 11,883     |  | 140         | 60  | 2,490      |  |
| 5           | -15 | 72,918     |  | 75          | 24 | 10,501     |  | 145         | 63  | 2,255      |  |
| 10          | -12 | 62,465     |  | 80          | 27 | 9,299      |  | 150         | 66  | 2,045      |  |
| 15          | -9  | 53,658     |  | 85          | 29 | 8,250      |  | 155         | 68  | 1,857      |  |
|             |     |            |  |             |    |            |  | 160         | 71  | 1,689      |  |
|             |     |            |  |             |    |            |  | 165         | 74  | 1,538      |  |
|             |     |            |  |             |    |            |  | 170         | 77  | 1,403      |  |
|             |     |            |  |             |    |            |  | 175         | 79  | 1,281      |  |
|             |     |            |  |             |    |            |  | 180         | 82  | 1,172      |  |
|             |     |            |  |             |    |            |  | 185         | 85  | 1,073      |  |
|             |     |            |  |             |    |            |  | 190         | 88  | 983        |  |
|             |     |            |  |             |    |            |  | 195         | 91  | 903        |  |
|             |     |            |  |             |    |            |  | 200         | 93  | 829        |  |
|             |     |            |  |             |    |            |  | 205         | 96  | 763        |  |
|             |     |            |  |             |    |            |  | 210         | 99  | 703        |  |
|             |     |            |  |             |    |            |  | 215         | 102 | 648        |  |
|             |     |            |  |             |    |            |  | 220         | 104 | 598        |  |
|             |     |            |  |             |    |            |  | 225         | 107 | 553        |  |

## Technical Data

### SLAB SENSOR 079e

|                 |  |
|-----------------|--|
| Literature      | D 079e.  |
| Packaged weight | 35 g (0.08 lb.), 316 stainless steel, 3 m (10') 24 AWG, 300 volt PVC insulated Zipcord |
| Dimensions      | 5 OD x 38 mm (3/16" OD x 1-1/2").  |
| Approvals       | CSA C US, CE approved.   |
| Operating Range | -50 to 60°C (-60 to 140°F).  |
| Sensor          | NTC thermistor, 10 kΩ @ 77°F (25°C ±0.2°C), β=3892.                                    |

## Limited Warranty and Product Return Procedure

**Limited Warranty** *The liability of kanmor Control Systems Ltd. ("kanmor") under this warranty is limited. The Purchaser, by taking receipt of any kanmor product ("Product"), acknowledges the terms of the Limited Warranty in effect at the time of such Product sale and acknowledges that it has read and understands same.*

The kanmor Limited Warranty to the Purchaser on the Products sold hereunder is a manufacturer's pass-through warranty which the Purchaser is authorized to pass through to its customers. Under the Limited Warranty, each kanmor Product is warranted against defects in workmanship and materials if the Product is installed and used in compliance with kanmor's instructions, ordinary wear and tear excepted. The pass-through warranty period is for a period of twenty-four (24) months from the production date if the Product is not installed during that period, or twelve (12) months from the documented date of installation if installed within twenty-four (24) months from the production date.

The liability of kanmor under the Limited Warranty shall be limited to, at kanmor's sole discretion: the cost of parts and labor provided by kanmor to repair defects in materials and/or workmanship of the defective product; or to the exchange of the defective product for a warranty replacement product; or to the granting of credit limited to the original cost of the defective product, and such repair, exchange or credit shall be the sole remedy available from kanmor, and, without limiting the foregoing in any way, kanmor is not responsible, in contract, tort or strict product liability, for any other losses, costs, expenses, inconveniences, or damages, whether direct, indirect, special, secondary, incidental or consequential, arising from ownership or use of the product, or from defects in workmanship or materials, including any liability for fundamental breach of contract.

The pass-through Limited Warranty applies only to those defective Products returned to kanmor during the warranty period. This Limited Warranty does not cover the cost of the parts or labor to remove or transport the defective Product, or to reinstall the repaired or replacement Product, all such costs and expenses being subject to Purchaser's agreement and warranty with its customers.

Any representations or warranties about the Products made by Purchaser to its customers which are different from or in excess of the kanmor Limited Warranty are the Purchaser's sole responsibility and obligation. Purchaser shall indemnify and hold kanmor harmless from and against any and all claims, liabilities and damages of any kind or nature which arise out of or are related to any such representations or warranties by Purchaser to its customers.

The pass-through Limited Warranty does not apply if the returned Product has been damaged by negligence by persons other than kanmor, accident, fire, Act of God, abuse or misuse; or has been damaged by modifications, alterations or attachments made subsequent to purchase which have not been authorized by kanmor; or if the Product was not installed in compliance with kanmor's instructions and/or the local codes and ordinances; or if due to defective installation of the Product; or if the Product was not used in compliance with kanmor's instructions.

THIS WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, WHICH THE GOVERNING LAW ALLOWS PARTIES TO CONTRACTUALLY EXCLUDE, INCLUDING, WITHOUT LIMITATION, IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, DURABILITY OR DESCRIPTION OF THE PRODUCT, ITS NON-INFRINGEMENT OF ANY RELEVANT PATENTS OR TRADEMARKS, AND ITS COMPLIANCE WITH OR NON-VIOLATION OF ANY APPLICABLE ENVIRONMENTAL, HEALTH OR SAFETY LEGISLATION; THE TERM OF ANY OTHER WARRANTY NOT HEREBY CONTRACTUALLY EXCLUDED IS LIMITED SUCH THAT IT SHALL NOT EXTEND BEYOND TWENTY-FOUR (24) MONTHS FROM THE PRODUCTION DATE, TO THE EXTENT THAT SUCH LIMITATION IS ALLOWED BY THE GOVERNING LAW.

**Product Warranty Return Procedure** All Products that are believed to have defects in workmanship or materials must be returned, together with a written description of the defect, to kanmor through its Representative. If kanmor receives an inquiry from someone other than a kanmor Representative, including an inquiry from Purchaser (if not a kanmor Representative) or Purchaser's customers, regarding a potential warranty claim, kanmor's sole obligation shall be to provide the address and other contact information regarding the appropriate Representative.



#### Symbol for Separate Collection in European Countries

This symbol indicates that this product is to be collected separately. This product is designated for separate collection at an appropriate collection point. Do not dispose of as household waste. For more information, contact the local authorities in charge of waste management.

**kanmor**<sup>®</sup>  
Control Systems

kanmor Control Systems Ltd.  
5100 Silver Star Road  
Vernon, B.C. V1B 3K4, CANADA  
(250) 545-2693 Fax. 250 549-4349  
Web Site: [www.kanmor.com](http://www.kanmor.com)

